
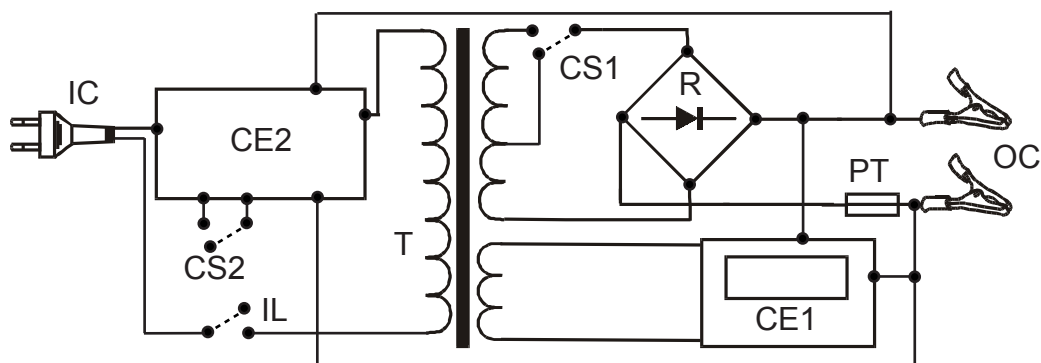
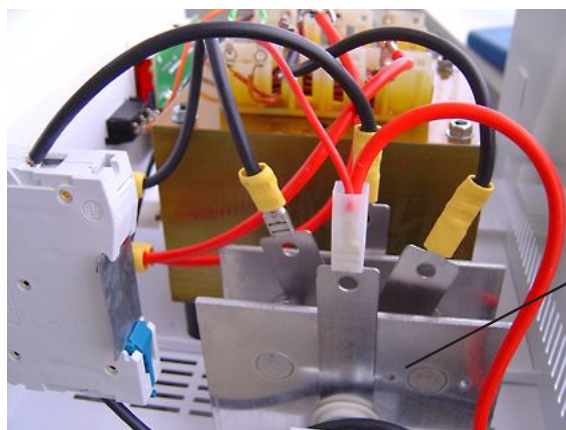


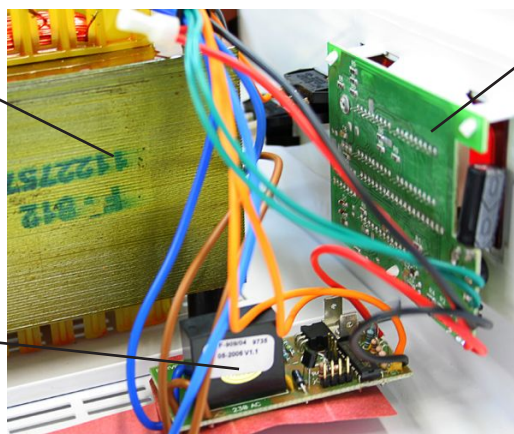

|                                    | CE1  | CE2      | CS1 | CS2  | IL  |
|------------------------------------|------|----------|-----|------|-----|
| Codigos de recambio<br>Spare codes | CE02 | CE909/04 | C17 | C10N | IL5 |

|                                    | IC  | OC    | PT   | R   | T       |
|------------------------------------|-----|-------|------|-----|---------|
| Codigos de recambio<br>Spare codes | DK3 | CS811 | PT20 | R35 | T915/97 |